EJU43101

Periodic maintenance chart

The periodic maintenance chart gives general guidelines for periodic maintenance. Have a Yamaha dealer perform the checks in the following chart. However, maintenance may need to be performed more frequently depending on your operating conditions. If you have any questions, consult a Yamaha dealer.

This " $\sqrt{\ }$ " mark indicates items to be checked and serviced by a Yamaha dealer.

| | Operation | Initial | Thereafter every | | | |
|--------------------------------------|--|----------|-----------------------------------|---------------------------------------|---------------------------------------|------|
| Item | | 10 hours | 50 hours or 12 months *1 | 100 hours or 12 months *1 | 200 hours or 24 months *1 | Page |
| Fuel line | Check fuel hoses and clamps | | | √ | | _ |
| Fuel filler cap/Wa- ter separator | Check O-rings for cracks and deformation | | | √ | | _ |
| Fuel tank | Check installation and straps | | | V | | _ |
| Water inlet strainer | Check for clogs and damage | | | V | | |
| Cooling water hoses | Check for damage and leakage, and check clamps | | | V | | _ |
| Engine oil | Replace | √ | | √ | | 93 |
| Oil filter | Replace | | | √ | | 93 |
| Intermediate hous- ing | Lubricate | | | √ | | _ |
| Spark plugs | Check | √ | | √ | | _ |
| Battery | Check state of charge, terminals, bands, and breather hose | | | V | | - |
| Battery leads | Check terminals | | | √ | | _ |
| Steering master | Check operation and for looseness | √ | | √ | | _ |
| Steering cable | Check exterior and con- nections, and lubricate | | | √ | | _ |
| Shift rod and reverse gate | Check exterior and con- nections, and lubricate | | | V | | _ |
| Air filter element | Check for damage and dirt | | | V | | _ |
| Air intake hoses | Check for damage, and check clamps | | | V | | _ |
| Throttle body | Lubricate throttle valves | | | √ | | _ |

Maintenance

| | Operation | Initial | Thereafter every | | | |
|-------------------|---|----------|-----------------------------------|---------------------------------------|---------------------------------------|------|
| Item | | 10 hours | 50 hours or 12 months *1 | 100 hours or 12 months *1 | 200 hours or 24 months *1 | Page |
| Exhaust system | Check for exhaust leak- age, and check hoses and clamps | | | V | | ı |
| Breather hose | Check breather hose and clamps | | | V | | _ |
| Impeller | Check for bends, damage, and foreign material | | | V | | _ |
| Jet thrust nozzle | Check movement, and lubricate | | | V | | - |
| Jet vacuum bilge | Check hoses for clogs and damage, check clamps, and clean bilge strainer | | | V | | ı |
| Stern drain plugs | Check O-rings | | | √ | | _ |
| Anode | Check for corrosion, and clean | | | | √*2 | - |
| Valve clearance | Check and adjust | | | | √*2 | _ |
| Rubber coupling | Check for cracks, indentations, looseness, and noise | | | | V | |
| Engine mount | Check for damage and peeling | | | | V | _ |

^{*1:} Whichever comes first.

Perform the pre-operation checks and post-operation checks before performing periodic maintenance.

EJU36943

Engine oil and oil filter

EWJ00341

WARNING

Engine oil is extremely hot immediately after the engine is turned off. Coming in contact with or getting any engine oil on your clothes could result in burns.

ECJ00992

NOTICE

Do not run the engine with too much or not enough oil in the engine, otherwise the engine could be damaged.

It is recommended to have a Yamaha dealer change the engine oil and the engine oil filter. However, if you choose to change the oil and filter on your own, consult a Yamaha dealer.

^{*2:} Check every 200 hours.