

Periodic maintenance chart

The periodic maintenance chart gives general guidelines for periodic maintenance. Have a Yamaha dealer perform the checks in the following chart. However, maintenance may need to be performed more frequently depending on your operating conditions. If you have any questions, consult a Yamaha dealer.

This “√” mark indicates items to be checked and serviced by a Yamaha dealer.

Item	Operation	Initial	Thereafter every			Page
		10 hours	50 hours or 12 months *1	100 hours or 12 months *1	200 hours or 24 months *1	
Fuel hoses, clamps, canister, and check valve	Check for damage, and check connections and tightening of clamps			√		143
Fuel filler cap	Check cap for damage, and check seal for cracks and deformation			√		143
Fuel tank	Check installation	√		√		143
Main switches and engine shut-off switch	Check operation	√		√		113
Batteries	Check specific gravity of electrolyte and terminals, and check for broken battery bands			√		149
Battery leads	Check terminals			√		–
Battery switches	Check operation	√		√		–
Meters (after completing the pre-operation checks)	Check lighting	√		√		–
Neutral switches	Check operation	√		√		–
Hatch interlock switches (wet storage compartment)	Check operation	√		√		–
Blowers	Check operation	√		√		111
Horn	Check operation	√		√		113
Navigation lights	Check lighting	√		√		112
Electric bilge pump	Check for water discharge by automatic operation, clean filter, check hoses for damage, and check tightening of clamps			√		–
Other electrical components	Check operation of shower, stereo, and other components	√		√		–
Steering master ASSY	Check operation and tilting mechanism, and check for looseness	√		√		–
Steering cables	Check connections and exterior, and lubricate			√		146

Maintenance

Item	Operation	Initial	Thereafter every			Page
		10 hours	50 hours or 12 months *1	100 hours or 12 months *1	200 hours or 24 months *1	
Articulating keel	Check operation, and check link rod for bends and damage			√		146
Remote control levers	Check exterior and operation, and check for looseness	√				147
Throttle cables	Check connections and exterior, and lubricate (jet thrust nozzle end)			√		–
Shift cables	Check connections and exterior, and lubricate (shift gate end)			√		–
Exhaust hoses, water locks, and resonators	Check for exhaust leakage, and check clamps at connections				√	–
Drain passages	Remove clogs			√		–
Drain plugs	Check O-rings	√		√		110
Hull and deck	Check for damage	√		√		–
Windshield and seats	Check installation and operation, and check for damage	√		√		–
Wakeboard tower and bimini top (AR240 HO/242 Limited S)	Check installation, and check for damage	√		√		–
Hatches, hinges, and packing seals	Check installation	√		√		–
Ladders	Check installation	√		√		–
Access port caps	Check exterior and installation			√		–
Spark plugs	Check	√		√		–
High-pressure fuel hoses	Check connections and exterior, and check for leakage			√		–
Engine oil	Replace	√	√	√		146
Engine oil filters	Replace			√		146
Air filter elements	Check for damage and dirt			√		144
Intake hoses and breather hoses	Check for damage, and check connections			√		–
Throttle bodies	Lubricate throttle valves			√		–
Anodes (engines)	Check for corrosion				√ *2	–
Valve clearance	Check and adjust				√ *2	–
Rubber couplings	Check for looseness and noise				√	–
Engine mounts	Check for damage and peeling				√	–
Cooling water hoses and cooling water pilot outlet hoses	Check for damage, and check connections				√	114
Water inlet strainers	Check for damage	√		√		–

Maintenance

Item	Operation	Initial	Thereafter every			Page
		10 hours	50 hours or 12 months *1	100 hours or 12 months *1	200 hours or 24 months *1	
Intake grates	Check for damage	√		√		–
Impellers	Check for bends, damage, and foreign material	√		√		–
Impeller ducts	Check and lubricate			√		–
Jet thrust nozzles	Check movement, and lubricate			√		–
Intermediate housings	Lubricate			√		–
Anodes (jet pump units)	Check for corrosion			√		148

*1: Whichever comes first.

*2: Check every 200 hours.

Perform the pre-operation checks and post-operation checks before performing periodic maintenance.